

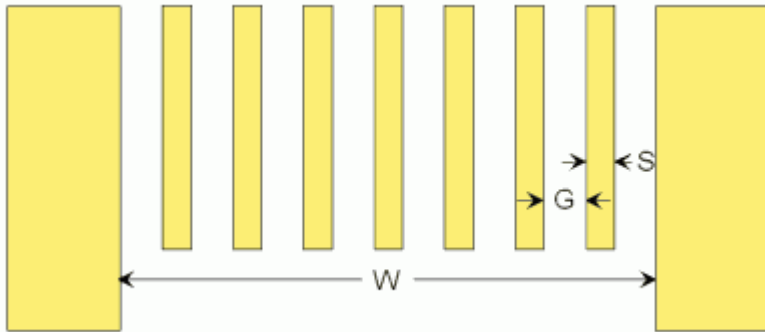


# Spacing Spindles Evenly

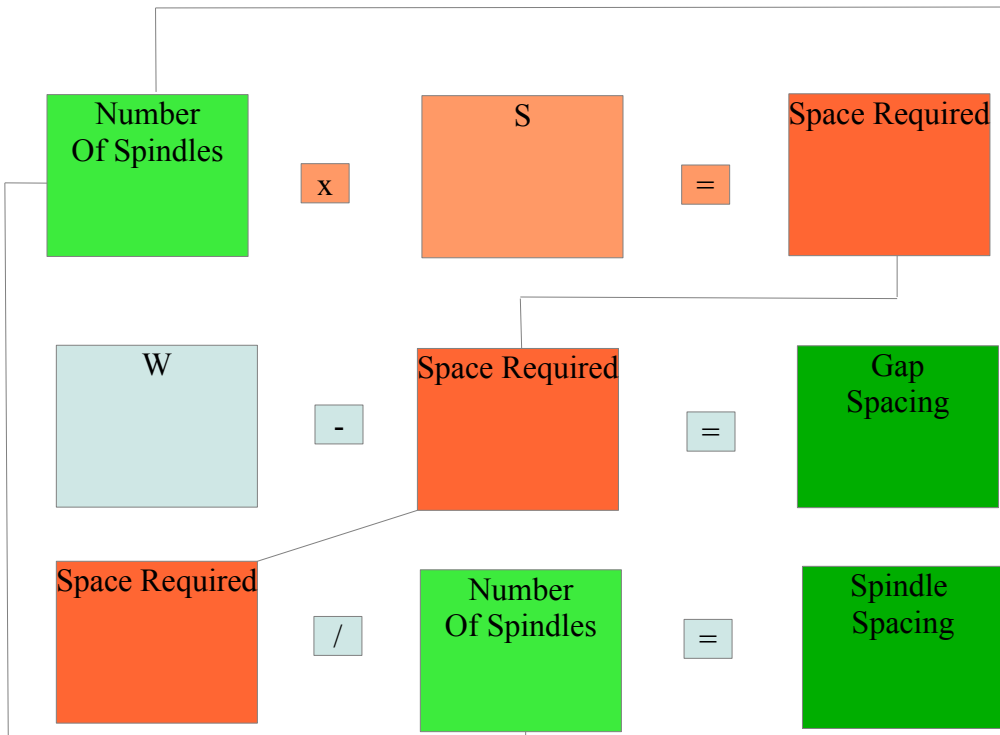

- Maximum Gap Size Code (C)
- Spindle With (S)
- With Between Posts (W)

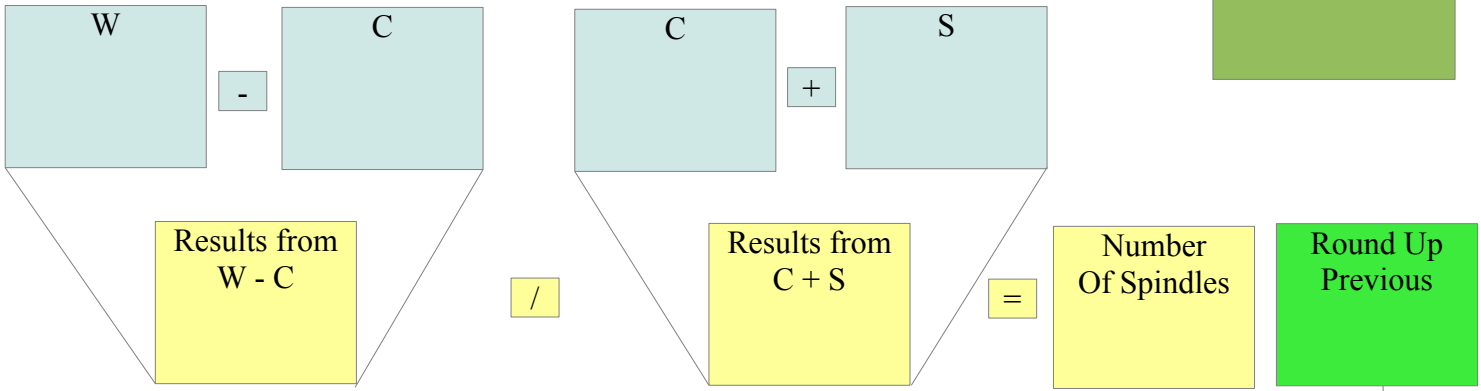

The Spindle Spacing should always be less than the maximum gap size code required by your local code!

Always double check.

Now that you have the Spindle Spacing required to make all spindles equally spaced simply set our tool with your result!

If the spindle spacing is more than the maximum gap size code than ADD one more spindle and repeat the last division.